

ABOUT BATTERY SENSOR

Battery 1 Voltage & Current

Battery 2 Voltage & Current

1. Power / Battery 1

Battery 1 voltage

2. Ground

Supply negative = Ground = Boat chassis

3. Power / Battery 2

Battery 2 voltage

4. Ground

Supply negative = Ground = Boat chassis

5. Shunt 1+

Battery 1 current shunt
50 mV

6. Shunt 1-

Battery 1 current shunt
50 mV

7. Shunt 2+

Battery 2 current shunt
50 mV

8. Shunt 2-

Battery 2 current shunt
50 mV

